
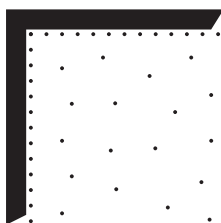
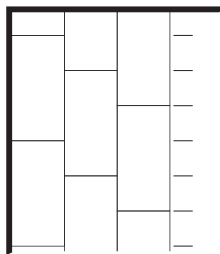


# Installation Instructions

Acclimate **UltraplyXL** panels 24 to 48 hours to the room environment in which they will be installed.

- 1 Install **UltraplyXL** printed side down before installing the finished floor
- 2 Install the long dimension of the panel perpendicular to the floor joists for maximum rigidity
- 3 Offset seams with sub-floor seam by at least 6" — **UltraplyXL** scores & snaps with a knife for easy installation
- 4 Stagger panels, ashlar fashion (see illustration), so that four corners do not meet. Offset underlayment joints by at least 16"
- 5 Leave a minimum 1/8" gap at walls
- 6 Lightly butt all panels, but don't force sheets into place
- 7 Fasten panels securely to a structurally sound, smooth clean and dry sub-floor with 18 gauge staples with chiseled ends and/or 12 gauge non-staining, galvanized ring groove shank nails
- 8 Make sure fasteners don't penetrate through the sub-floor or into floor joists
- 9 Position fasteners in the field on 4" inch centers
- 10 Attach edge fasteners 1-1/2" apart and 3/8" from edge
- 11 Set fasteners flush or slightly below the panel surface
- 12 Finally, fill all edge joints and other surface depressions with a *PORTLAND-BASED LATEX MODIFIED PATCH* according to the manufacturers instructions. Make sure patch is *FULLY DRY*, then sand surface smooth before installing the finished floor.

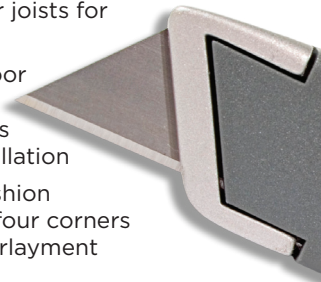

## Notes & Exceptions

*Moreland Company USA has the highest standards of quality in the marketplace. Environment and temperature should be noted to ensure proper acclimation. Flooring should be installed immediately after underlayment installation to prevent site-influenced damage. Moreland Company USA is not responsible for faulty installation. No defective material is to be installed. Final inspection of each panel is the responsibility of the installer.*